


JIGSAW

“DIY” Tile Shower Tray Systems

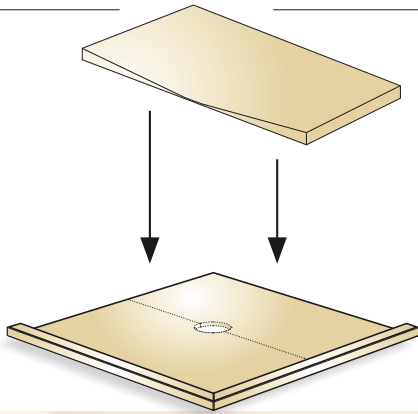

No
sand and
cement
screed
required!

ProFinish™
Jigsaw

Fast, Efficient, Easy!

Advantages

- Create tray and waterproof within hours
- Creates a professional finish every time
- 20 year guarantee when protected from water by an approved waterproofing membrane.
- Removes the need for structural building modifications
- Ideal surface for tiles
- Perfect for flat floor refits
- Guaranteed 1:30 slope to waste
- Easily cut to size if required with a Stanley knife
- Suitable for use with a number of major waterproofing products
- Acoustically superior to sand and cement

NB: ProFinish Jigsaw Tile Shower Tray System must be installed after wall cladding is fixed and must be waterproofed before tiling.














Jigsaw Components

ProFinish™

NEWLINE


ProFinish Jigsaw provides flexibility to create a number of different sizes. Please call or email us for further information on component selection.

Tile bases 1, 12, 15 are supplied as 2 halves per box. Please quote part number below when ordering.

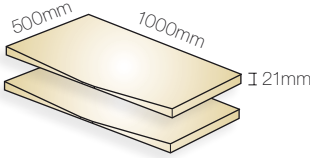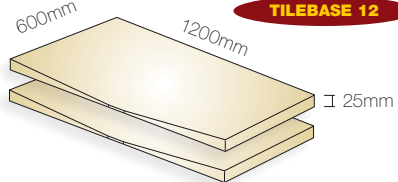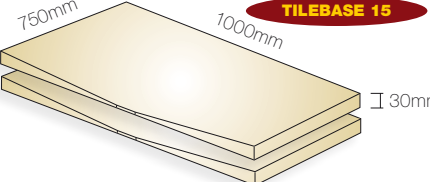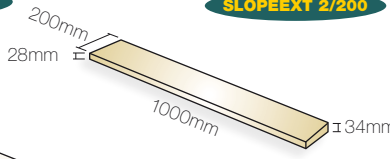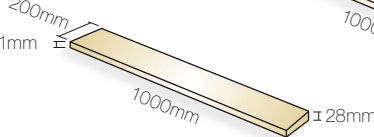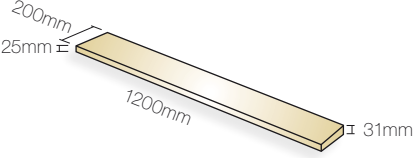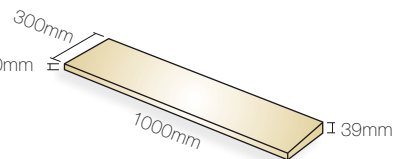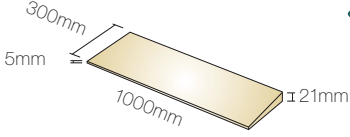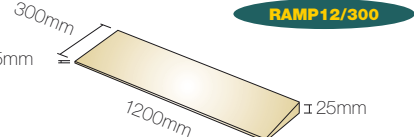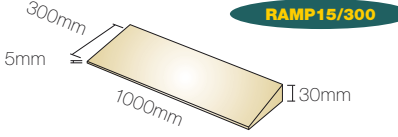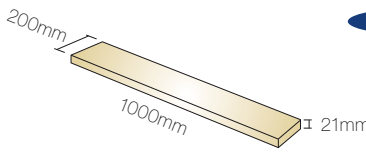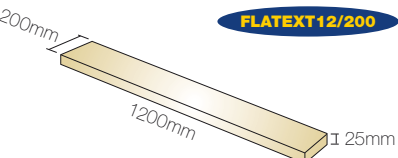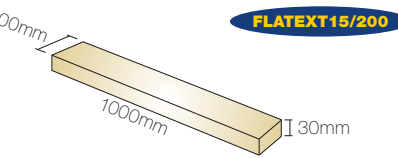
 <p>TILEBASE 1</p>	 <p>TILEBASE 12</p>	 <p>TILEBASE 15</p>
<p>Slope extensions 1, 12 and 15 as 1 per box.</p>		
 <p>SLOPEEXT 1/200</p>  <p>SLOPEEXT 2/200</p>	 <p>SLOPEEXT 12/200</p>	 <p>SLOPEEXT 15/300</p>
 <p>RAMP 1/300</p>	 <p>RAMP 12/300</p>	 <p>RAMP 15/300</p>
 <p>FLATEXT 1/200</p>	 <p>FLATEXT 12/200</p>	 <p>FLATEXT 15/200</p>

Tile base Hob supplied as 2 per box.

TILEBASEHOB60



60 x 60 x 1060mm **hob** block, 3° slope. 2 pieces per box.

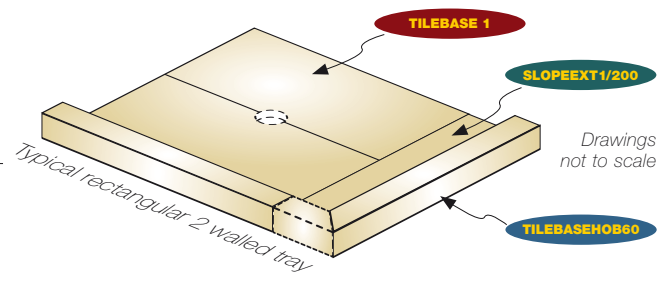

How to Determine Which Components you Require


Below are 3 examples of tray options when using TILEBASE 1 & SLOPEEXT1/200.

For further details on how to select components, call or email us for a Component Request form.



SIZE: 1000mm x 1200mm
WASTE: 500 x 500mm

1 xTILEBASE 1
1 x SLOPEEXT1/200
1 X hob 60 x 60 x 1000

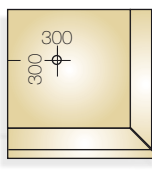

SIZE: 1000mm x 1000mm
(Trim tray to fit waste)
WASTE: 300 x 300mm

1 xTILEBASE 1 (Trimmed)
2 x SLOPEEXT1/200
2 X hob 60 x 60 x 1060



SIZE: 900mm x 1100mm
(Trim tray to fit waste)
WASTE: 300 x 400mm

1 xTILEBASE 1 (Trimmed)
2 x SLOPEEXT1/200

Component Calculator


Calculate how many of each component you will require to form the shape you need.

Draw the shape of the shower on the grid to the right.

Measuring from the 'centre' of the waste out to the edge of the shape you want.


Then count up the number of components the shape covers

Sill Block: If a sill block is required, order the amount of sill block needed. They are available in 1060mm lengths.

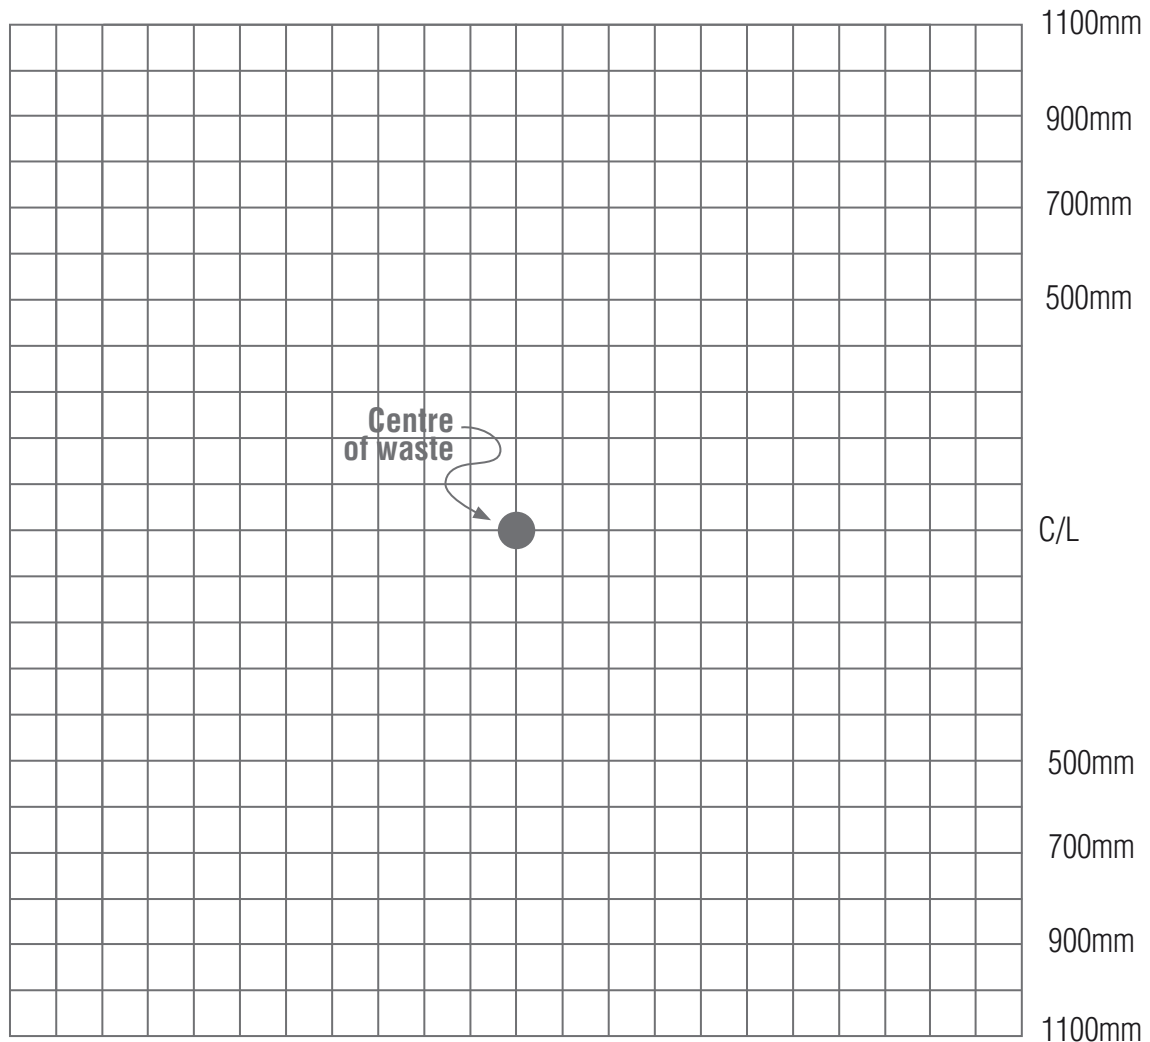


Shower Base Types


Recesed
(Stepless Floor)

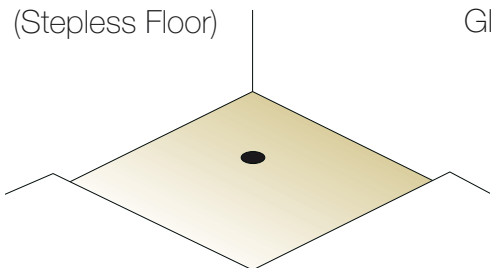

Hob (sill)
Glued to floor.

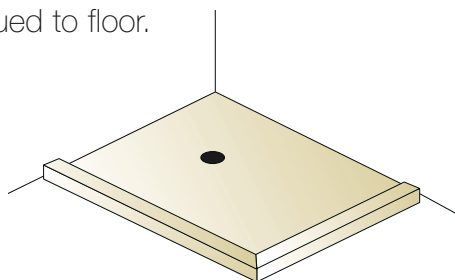

Aluminium angle
Glued to floor.

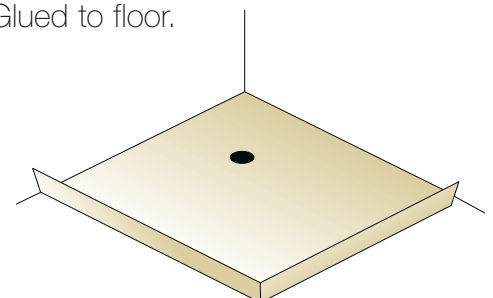

“ProFinish™ Jigsaw Tile Shower Tray Systems are Built to Last”

Testing Specs:

- Manufactured of High Density Polyurethane
- Sound benefits - similar to Cork
- Compression Testing: -229kg to create 1mm of deflection, -2193kg to create 2 mm of deflection
- Cyclic Testing -36589 cycles of 130kg (equal to four showers a day for 25 years) were carried out to simulate the use of the tray as a waterproofing substrate in a shower – ‘no visual failures were observed to the applied waterproof membrane’.

Tested & Approved with the following waterproofing brands:

WET-SEAL: Wetseal ARDEX: WPM001 & WPM300 MAPEI: Mapegum WPS & Mapellastic Smart JAYDEX: Elastik
ASA: Dampfix 2, 3, PU & Waterbase LATICRETE: 9253 PROTECTO WRAP: AFM/WN EQUUS: Chevaline Dexx
CONSTRUCTION CHEMICALS: Liquid Flash II H B FULLER: WPM101 FLEXCO: Flexi-seal 2 Part Liquid Membrane

Installation Guide: Fast, Efficient, Easy!




1. Before you begin, make sure the floor is clean, free of dust and is a level flat surface.




2. Fit the waste outlet in the floor.



3. Once the waste has been installed, measure, cut and place the ProFinish™ tray into position.

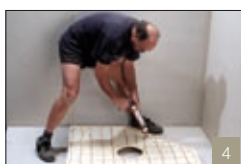

4. Lift the base and apply the adhesive within the marked tray perimeter, using an 80mm grid pattern commencing 25mm in from the outer edges.

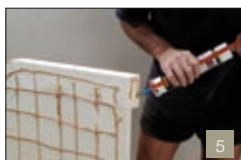

5. Ensure adhesive is applied to the sill ends - providing sill to wall joint adhesion.



6. Use a sharp knife to cut around the outside of the waste flange until the tray fits neatly around the waste flange outlet perimeter.



7. Fit back into place and press firmly over the entire surface. To ensure better adherence it is suggested that the tray be weighted to the floor for at least 1 Hour.



8. Once the tray is secured to the floor, it is ready for the application of your choice of waterproof membrane. Listed above are waterproofing manufactures who have approved their product for application to the ProFinish™ tray.



9. Apply the waterproof membrane according to the manufacturer's instruction. Ensure water proofing is applied down into the waste flange and up the inside vertical face of the tile sill (hob), across the top edge and down to the floor line on the outside of the ProFinish™ tray. Where frameless doors are to fitted it is recommended that floor areas outside the shower should also have a waterproofing membrane applied, prior to tiling.

Danmac Help Line: 1300 139 706

WEDGE

“INSTANT SLOPE”
for any floor



INDOOR



OUTDOOR

No sand and cement screed required!


Application is ideal for:

- Shower floors
- Bathroom floors
- Wheelchair access bathrooms
- Slope for balcony
- Sauna floors

Designed to be used in conjunction with infloor channel grating

Advantages:

- Ideal for slabs and large tiles
 - Creates a professional finish every time
 - Removes the need for structural modifications
 - Perfect for flat floor retro-fits
 - Guaranteed 1:60 true even slope
 - One continuous slope
 - 20 year guarantee*
 - Light weight
 - Time savings
 - Acoustically superior to sand and cement
- *when protected from water by an approved waterproofing membrane

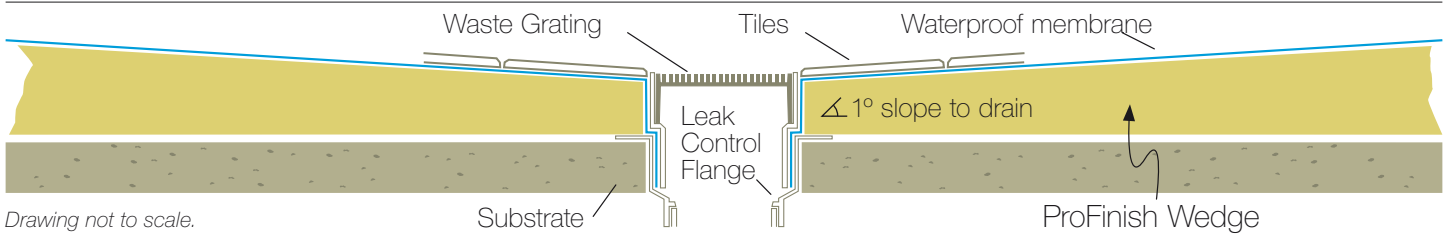


Drawing not to scale.


Components:

- WEDGE 5-21 1000 x 1000 sloped wedge starting at 5mm increasing to 21mm
- WEDGE 21-37 1000 x 1000 sloped wedge starting at 21mm increasing to 37mm
- WEDGE 37-53 1000 x 1000 sloped wedge starting at 37mm increasing to 53mm
- All parts are supplied in 2 pieces.

Drawings not to scale

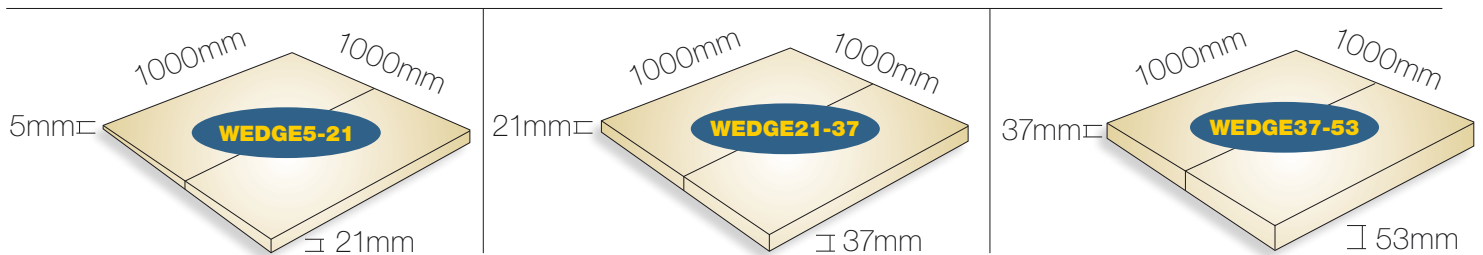

WEDGE components simply glue together, to create an even 1° slope, ready for waterproofing and tiling.

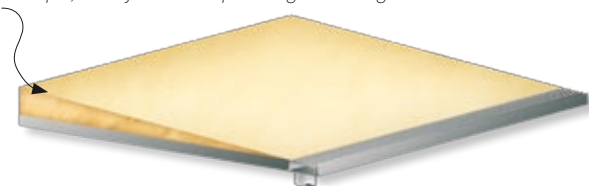

Installation:

- Glues to concrete and timber floors
- Easily cut using Stanley knife or handsaw
- Contact supplier for recommended glues

WHEELCHAIR ACCESS SHOWER

“INSTANT SLOPE” for any floor

No structural modifications to floor required!


Advantages:

- Removes the need for structural building modifications
- Compatible with Vinyl & Tile
- Creates a professional finish every time
- Perfect for flat floor retro-fits
- Time savings
- 20 year guarantee*
- Guaranteed 1:30 true even slope
- Light weight
- Acoustically superior to sand and cement


*when protected from water by an approved waterproofing membrane

Possible applications:


1m x 1m Tray + 300mm Ramp with Glass Panel

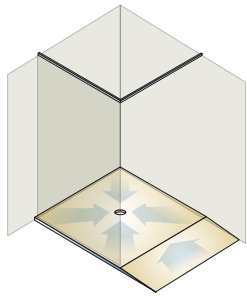

1.2m x 1.2m Tray + 300mm Ramps with Curtain

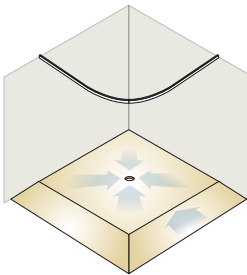

Vinyl floor system shown above.

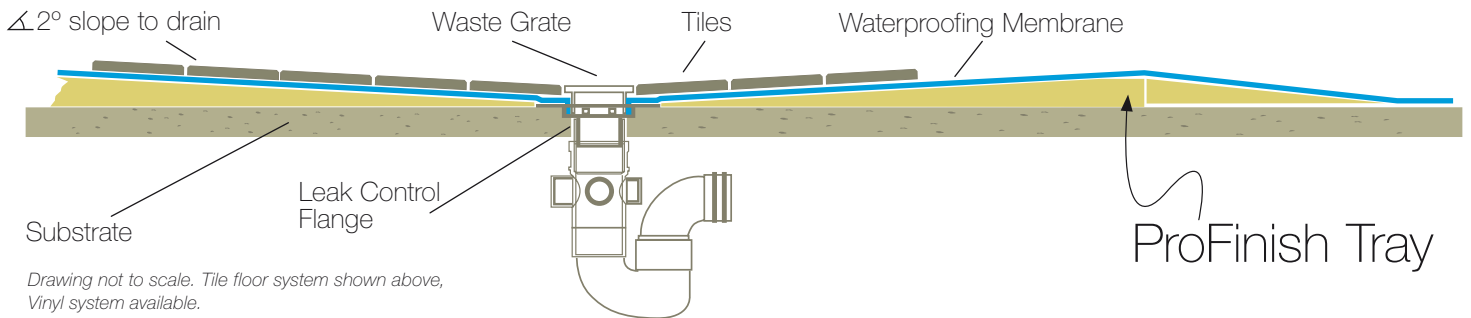

Drawing not to scale. Tile floor system shown above, Vinyl system available.

Your local distributor:



danmac™
LUXURY SHOWER SCREENS

99 Frankston Gardens Drive
Carrum Downs, Victoria, 3201
PO Box 2807, Seaford, Victoria 3198
Phone: (03) 9775 1223 or 1300 139 706
Fax: (03) 9775 1445
Email: danmac1@bigpond.net.au
Visit: www.Danmac.com.au